

# Universal Standpipe (Kit No. 093624)

## Installation Instructions

### PURPOSE

This kit is intended primarily for use with the product uptake hoses on the multi-washer laundry systems.

This kit includes:

- 2 container caps
- 1 tie wrap
- 2 hose clamps
- 1 34" standpipe

### TO INSTALL

To install the standpipe:

1. Select the proper cap:  
Threads inside.....5 gal containers  
Threads outside.....15 to 55 gal containers
2. Slide the cap over the notched end of the pipe down to the existing tie wrap and place another tie wrap above the cap. See Figure 1.
3. Cut the long end of the pipe so that it will clear the bottom of the container by about 2 inches when the cap is screwed onto the container bund. See Figure 1.
4. Select the pickup hose (not included in the kit) to best accommodate the product to be pumped.

Nylon Reinforced Hose:

3/8" I.D..... most products

1/2" I.D..... most products

5. Cut the hose to a length that reaches from the pump to the container bottom. The end that will be in the container should be cut at a 45 degree angle. See Figure 1.
6. Open the hose clamp so it can easily slide over the hose, and place the clamp in the pipe notch. Insert the hose into the standpipe and through the clamp. See Figure 1.
7. Lower the standpipe into the product, screw the cap into the bund and push the hose down until it just touches the bottom of the container. Tighten the hose clamp.
8. Attach the hose to the inlet of the product pump. Using the hose clamp supplied with the kit.

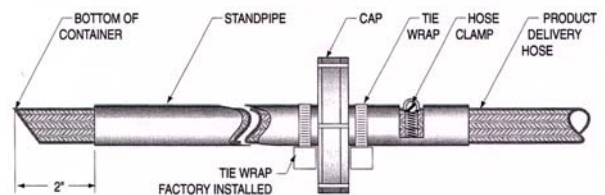


Figure 1