


# Instructions

Air Gap Assembly #097551

June 24, 1998

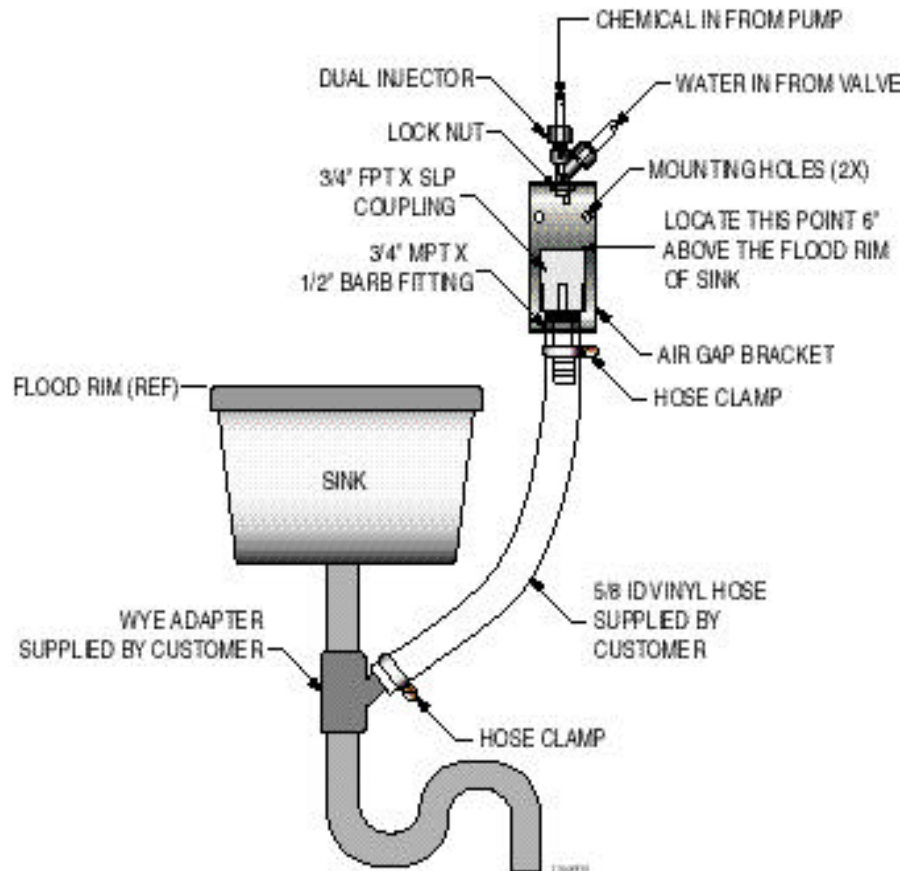

## INSTALLATION INSTRUCTION

1. Assemble dual injector through top hole of air gap bracket securing with lock nut.
2. Thread coupling onto barb fitting using available pipe thread sealant as required.
3. Mount the bracket assembly to wall using the mounting holes provided, 6 inches above the sink flood rim.
4. Install wye adapter or other suitable fitting (supplied by customer) into drain line ahead of p-trap. This fitting will connect the 5/8 ID hose from the air gap assembly to the drain line. This fitting must be a minimum of 1/2" I.D. to prevent water from overflowing at air gap
5. Slip barbed fitting through the hole in bottom of air gap bracket.
6. Install 5/8 ID vinyl hose (supplied by customer) onto barb, pushing until end is fully seated against the bracket securing the fittings in place. Install hose clamp around connection.

7. Cut hose to fit and install opposite end to drain connector. Install hose clamp around connection.

## INCLUDED IN KIT

Quantity	Item #	Description
1	097552	Air Gap Bracket
1	051151	Coupling, 3/4 FPT x SLP
1	092915	Barb Fitting, 1/2 B X 3/4 MPT
2	014009	Hose Clamp
1	020974	Dual Injector Assembly
1	041854	Hex Lock Nut



*Air gap must be located 6" minimum above flood rim of sink.*