

# INSTALLATION INSTRUCTION

## LIQUICAL/OMNITROL PINCHED WIRE REWORK KITS (REQUIRED FOR UNITS BUILT BETWEEN 1/5/00 AND 5/15/00)


**This rework kit is designed to prevent shorting caused by pinched wires. Follow these simple steps for installation:**

1. Remove four faceplate screws and open cover.
2. Wrap the two black power wires into the corrugated tubing as close as is possible to their junction on the main PCB.

3. Tie wrap the corrugated tubing at both ends, ensuring wires remain in the protective tubing.
4. Repeat steps 2 & 3 for the remaining PCB wires.
5. Close enclosure and screw shut, making sure no wires have fallen between the face plate and interior structure.

That's it! You can continue to rely on your unit as you always have.

If you have any additional questions or concerns, please contact our Technical Service staff at (800) 899-7302.

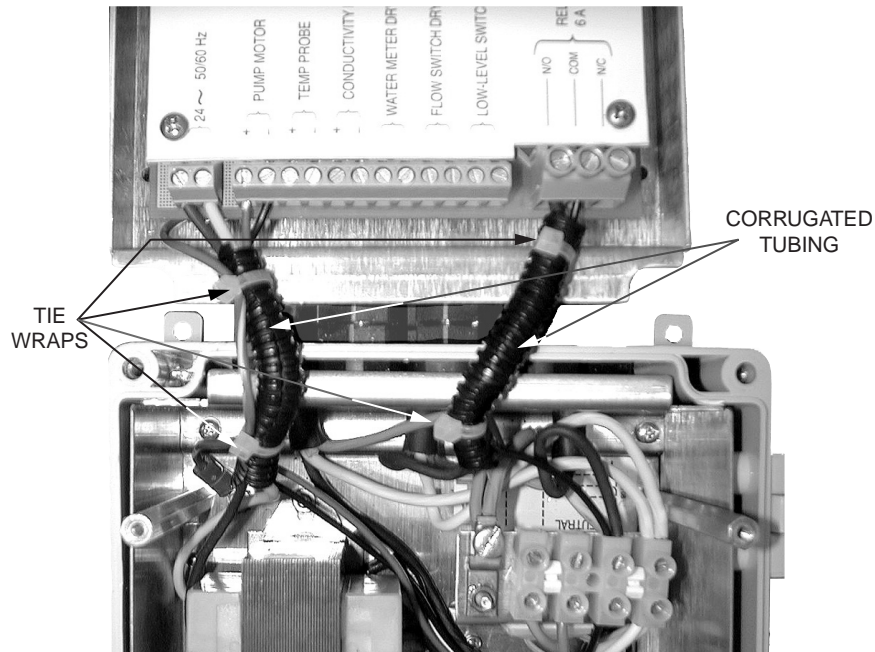

**Beta Technology, Inc**  
2841 Mission Street  
Santa Cruz • CA  
U.S.A. • 95060

TEL • 831 • 426 • 0882  
TEL • 800 • 858 • 2382  
FAX • 831 • 423 • 4573  
FAX • 800 • 221 • 8416  
TEL • 800 • 899 • 7302 Tech Support  
sales@beta-technology.com

Customer Service

**Beta Technology, Inc**  
4 Finway, Dallow Road  
Luton LU1 1TR

Freephone • 0800 • 052 • 4726  
Tel • +44(0) • 1582 • 528600  
Fax • +44(0) • 1582 • 528111  
VAT REG.NO.BG.354 - 09975 - 44  
Tel • +44 (0) • 1582 • 702058 (Tech Support)  
europe.sales@beta-technology.com

<http://www.beta-technology.com>