

Equipment Technical Bulletin

200 RPM Big Wheel Pump Motor Change



ISSUE

Due to the inconsistent quality of the 200 RPM big wheel pump motor used in ILS, ILS Max, and PR1100, we have identified a new supplier for this part. For details on the pump motor quality issue, see ETB "Premature Motor Failure in ILS, ILS Max, ILS MaxT Summit XL and P-6100T", #15072-00, November, 2003. Please contact Customer Service if you need a copy of this ETB.

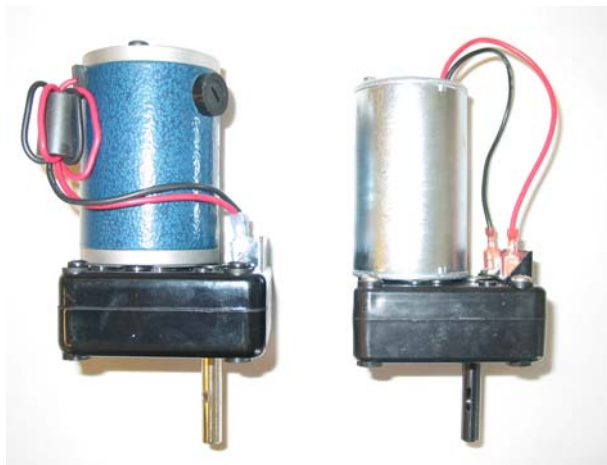


Figure 1. New Pump Motor Gearbox

Figure 2. Old Pump Motor Gearbox

- The new big wheel pump is of slightly larger diameter and weighs about 10% more. These differences will not affect the way the motor operates with Beta dispensers.
- The new motors will fit into all equipment that currently use 200 RPM motors.
- The new motor will last twice as long as the old motor
- The catalog number for the new pump motor is #038835.



Beta Technology
2841 Mission Street
Santa Cruz • CA
U.S.A. • 95060

TEL • 831 • 426 • 9882
TEL • 800 • 858 • 2382
FAX • 831 • 423 • 4573
FAX • 800 • 721 • 8416

Customer Service

TEL (U.S. and Canada) • 800 • 468 • 4893
TEL (outside U.S. and Canada) • 410 • 228 • 1292
Tech Support
sales@betatechnology.com

Online Ordering: <http://www.beta-technology.com>

Beta Technology
4 Finway, Dallow Road
Luton LU1 1TR
United Kingdom

Freephone • 0800 • 052 • 4726

Tel • +44(0) • 1582 • 528600

Fax • +44(0) • 1582 • 528111

Freephone • 0800 • 052 • 4726

VAT REG.NO. BG.354 - 099775 - 44

europa.sales@beta-technology.com

Customer Service

Tech Service

Beta Technology is ISO 9001 Certified.