

Summit E for Dairy CIP

Chemical injections verified with time stamp, and computer printouts




Beta Technology

2841 Mission Street
Santa Cruz • CA
U.S.A. • 95060

TEL • 831 • 426 • 0882
TEL • 800 • 858 • 2382
FAX • 831 • 423 • 4573
FAX • 800 • 221 • 8416

TEL [U.S. and Canada] • 800 • 468 • 4893
TEL [outside U.S. and Canada] • 410 • 228 • 1292
sales@beta-technology.com

Online Ordering: <http://www.beta-technology.com>

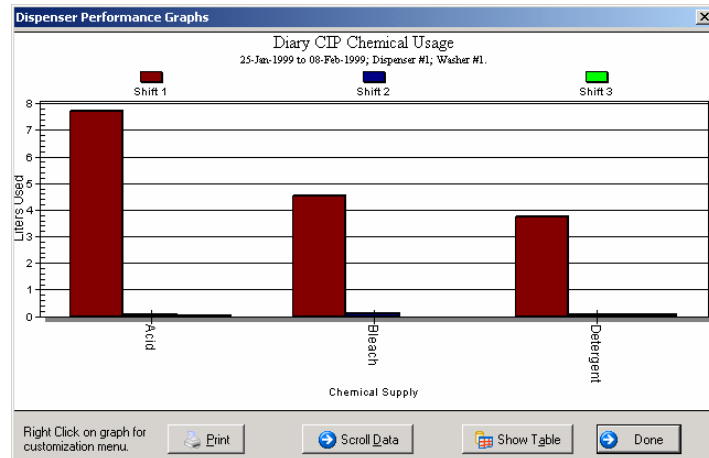

Summit E is a two to three pump CIP system for flushing lines and tanks to reduce plate count, cell count, and drug residue. The optional data board plugs into the main PCB, so you can have a detailed record of CIP chemical activity by date and time, printed right off your computer! Data is available in report formats as well as graphs, making it easy to verify what's going on, and to share data throughout your organization when required.

Benefits



- Detailed CIP data reports
- CIP data graph generation
- Long life pump tubes
- Flexible text-based programming
- Optional low level alarms ensure chemical's always present
- Speed control and spring rollers increase dosing accuracy and tube life

Intuitive programming saves you time and money!

- Prime and calibrate easily, with the programmer in one hand and a measuring cup in the other
- SmartScreens lead you through the programming so quickly, a first-time user can program in just a few minutes.
- Smart relay mode reduces programming time since you don't have to calculate runtime. Just program the controller to turn the trigger on for one second per 0.3 oz (or 10 ml) of chemical you need!



System Events

File Record Communicate

Retrieve Running Strip Dispenser Washer TX RX

Dispenser # 03 Sample ILS Site Record

Date	Time	Washer #	Pump #	Amount	Event
04-Feb-1999	13:15:01	1	1	23	FEED REQUEST FIXED DOSE MODE
04-Feb-1999	13:15:01	1	2	45	FEED REQUEST FIXED DOSE MODE
04-Feb-1999	13:15:01	1	3	36	FEED REQUEST FIXED DOSE MODE
04-Feb-1999	13:15:54	1	2	45	DELIVERY COMPLETE
04-Feb-1999	13:16:57	1	2	45	DELIVERY COMPLETE
04-Feb-1999	13:17:31	1	1	8	DELIVERY COMPLETE
04-Feb-1999	13:17:31	1	1	241	CALC. PUMP RATE FAST CALIBRATION
04-Feb-1999	13:17:35	1	1	15	DELIVERY COMPLETE
04-Feb-1999	13:17:40	1	1	23	DELIVERY COMPLETE
04-Feb-1999	13:17:46	1	1	23	DELIVERY COMPLETE
04-Feb-1999	13:18:22	2	3	66	CALC. PUMP RATE FAST CALIBRATION
04-Feb-1999	13:18:22	2	3	6	DELIVERY COMPLETE
04-Feb-1999	13:19:35	2	2	6	DELIVERY COMPLETE
04-Feb-1999	13:19:35	2	2	6	ERROR: CHEMICAL SUPPLY PROBLEM
04-Feb-1999	13:20:26	2	2	6	FEED RETRY, MANUAL


Direct COM 1 4:27:15 PM

Detailed CIP data assures your customer of clean lines!

- Our data PCB stores chemical volume data for quality assurance and cost reporting
- Triggering and other data allows you to effectively troubleshoot any issues with signals from the controller
- Professionally formatted

Generate graphs with the touch of a button!

Customers like the professional-looking reports our ManageNet PC software generates, but they also love the graphs, which can make a point instantly and look fantastic pasted into your PowerPoint sales presentations!

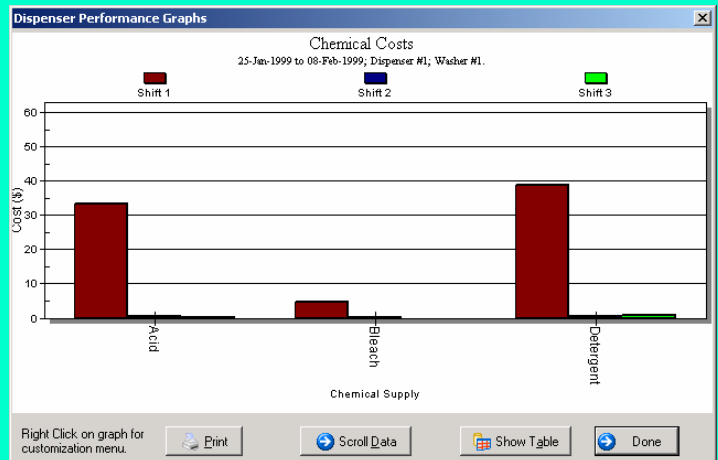

Why not order a system and try it for yourself today?

Item	Description
1204679	Summit E, 3 pump with internal trigger module
1201354	Summit E programmer, user to program and prime
1205634	Data PCB
099050	ManageNet PC Software
097906	Protocol converter for data lines to PC
1202252	Converter cable, USB/RS232